Service Manual



ORDER NO.
CRT2323

REMOTE CONTROL UNIT

CD-R600

EXPLODED VIEWS AND PARTS LIST

EXTERIOR

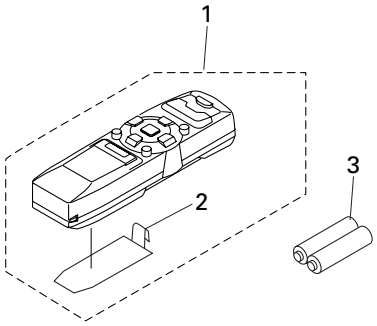

NOTE:

● Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.

● **EXTERIOR SECTION PARTS LIST**

Mark	No.	Description	Part No.
*	1	Remote Control Assy	CZX3237
	2	Battery Cover	CNS5032
	3	Battery	CEX1006

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS SERVICE INC. P.O.Box 1760, Long Beach, CA 90801-1760 U.S.A.
PIONEER ELECTRONIC [EUROPE] N.V. Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE.LTD. 253 Alexandra Road, #04-01, Singapore 159936

© PIONEER ELECTRONIC CORPORATION 1999

K-ZZB. MAR. 1999 Printed in Japan

ATT button
This lets you quickly lower volume level (by about 90%).
Press once more to return to the original volume level.